

Sky Movies Channel activation Procedure

In order for Royal Navy and Royal Fleet Auxiliary Ships to receive the SKY Movies Channel the following procedure should be followed. This can be done from the front panel of the IRD, you will have either a ProView 7100 or an older 7000 model. The system must be locked to the satellite to do this.



Harmonic ProView 7100



Harmonic ProView 7000

The following procedure is for the Eutelsat 10A satellite

Step 1.

Press the ENTER button, then by pressing the down button select Routing and Descrambling and press ENTER.



Step 2.

Ensure TS1 is highlighted and press ENTER.




Step 3.

Ensure that Activation is showing Enable.



Step 4.

Press the down button to Descrambling and press ENTER.

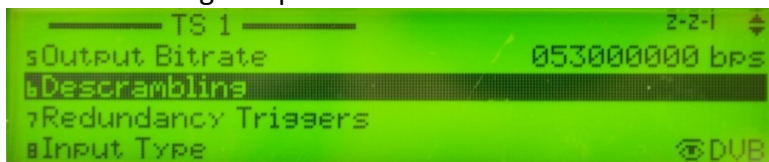

Step 5.

Press the down button to Sky Movies, press ENTER and select CAM 1 and press ENTER. Press ESC and confirm that the program is allocated to CAM1.

Name	Id	Device	Mode
1716	8016	None	FTA
1817 Sky Movies	8017	CAM 1	CAS
1918 Nepali TV	8018	None	FTA
2019	8019	None	FTA

Step 6.

Ships that have **8 service CAMS** must take off one Radio Channel to accommodate the Sky Movies Channel on **Eutelsat10A**, we recommend that this Channel is the World Service as this may be transmitted in the clear in the near future. Press the down button to World Service, press ENTER and select None then press ENTER, press ESC and confirm that program is not allocated to a CAM

Name	Id	Device	Mode
3874 BFBS Samishran	8037	None	FTA
3964	8038	None	FTA
4081	8039	None	FTA
4182 World Service	8040	None	CAS

CAM information can be found on the reverse of the CAM.



For SES6 follow steps 1 – 5, 7

Step 7.

These changes must now be saved as a preset. Press ESC several times to get to start of the menu. Press the ENTER button, then by pressing the down button select Presets, select Delete, press ENTER and select the satellite to be deleted, press ENTER.

Presets	
1	Activate
2	Create
3	Delete
4	Rename

Now select Create and press ENTER, select New Preset and press ENTER. Using the Up/Down/Right Buttons, enter the preset name:

NAVY_DVBS2_10A_011215 – For the **Eutelsat 10A satellite**

NAVY_DVBS2_SES6_011215 – For the **SES6 Satellite**

NAVY_DVBS2_NSS12_011215 – For the **NSS12 satellite**

Now press ENTER. Press ESC then Activate, the new Preset should appear in the list. Press ESC several times to top of the menu.

You will now be able to view the SKY MOVIE Channel once televisions / STB'S have been re-tuned.

It is **important** that no more than **8 channels** are allocated to **8 channel CAMS**, and no more than **10 channels** are allocated to **10 service CAMS**.

Encrypted Channels Line Up

Eutelsat 10A	CAM Allocation	SES 6	CAM Allocation	NSS12	CAM Allocation
BBC One	1	BBC One	1	BBC One	1
BBC Two	2	BBC Two	2	BBC Two	2
ITV	1	ITV	1	ITV	1
BFBS Extra	2	BFBS Extra	2	BFBS Extra	2
Sky Sports 1	1	Sky Sports 1	1	Sky Sports 1	1
Sky Sports 2	2	Sky Sports 2	2	Sky Sports 2	2
BFBS Sport	1	BFBS Sport	1	BFBS Sport	1
Sky News	2	Sky News	2	Sky News	2
Forces TV	1	Forces TV	1	Forces TV	1
BBC One Delay	1	BBC One Delay	1		
BBC Two Delay	2	BBC Two Delay	2		
ITV Delay	1	ITV Delay	1		
BFBS Extra Delay	2	BFBS Extra Delay	2		
Sky Movies	1	Sky Movies	1	Sky Movies	1
				Nepali TV	2
BFBS Radio 2	2	BFBS Radio 2	2	BFBS Radio 2	2
Talk Sport	2	World Service	2		

Movie Channel activation procedure